


Super Anier

— Wide range of deodorizing effects —


Alkaline odor
Ammonia

Acidic odor
Isovaleric acid


- Super Anier exhibits deodorizing effect on odors adhering to textiles.
- Deodorizing effect is restored by laundry.

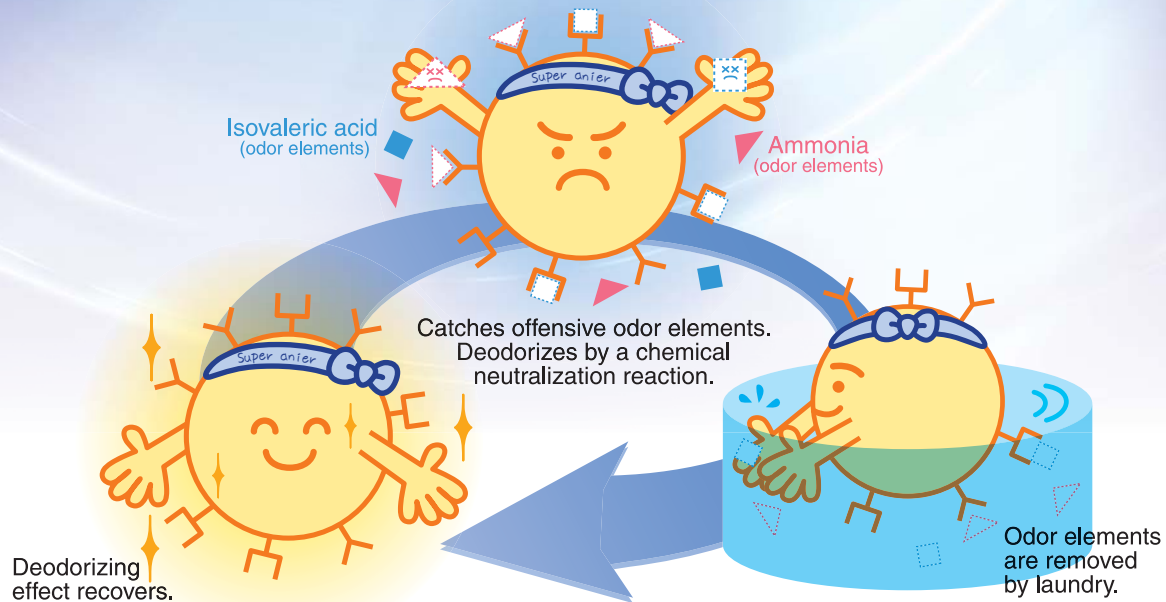

Deodorizing effect test on "Super Anier"

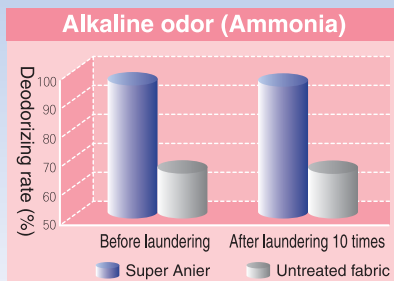

<Measurement method> Place 10 cm x 10 cm sample into a 500-cc Erlenmeyer flask and hermetically seal. Using a gas-tight syringe, inject 0.2ml of ammonia gas and let it stand for 1 hour. By a gas detector tube, measure the ammonia concentration in the flask.

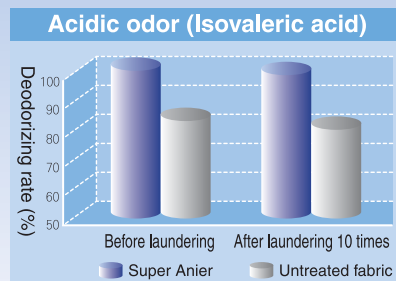

<Measurement method> Place 10 cm x 10 cm sample into a 500-cc Erlenmeyer flask and hermetically seal. Using a micro syringe, 0.5 μl of isovaleric acid stock solution, heat to evaporate, and let it stand for 1 hour. By a gas detector gas tube, measure the isovaleric acid concentration in the flask.

(Test cloth) : 100% cotton knit fabric



SHIKIBO LTD.
3-2-6 BINGOMACHI, CHUO-KU,
OSAKA 541-8516 JAPAN

- The data described in this brochure are the results with our representative fabric.
- Unauthorized reproduction of the contents of this brochure is prohibited.